


We Put Kids First.

Tunnel Twister Market Slide

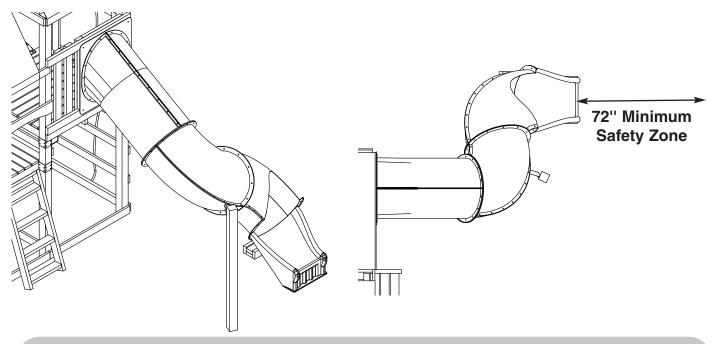

check out http://www.swing-n-slide.com/timberbiltplanupdates.htm

for updates to these instructions
For more information, visit these links:
http://www.swing-n-slide.com/timberbilt

http://www.homedepot.com http://www.homedepot.ca



ASSEMBLY INSTRUCTIONS

Swing•N•Slide • 1212 Barberry Drive • Janesville, Wisconsin 53545 Visit our web site at: www.swing-n-slide.com or call us at 1-800-888-1232



Safety Checklist for Swing-N-Slide Play Sets and Accessories

Observing the following statements and warnings reduces the likelihood of serious or fatal injury

Installa	ition Safety – Have You:				
	Made sure all hardware is tightened securely? (Supplied bolt covers must also be fastened securely.)				
	Using a hacksaw, cut off all protruding threaded ends of bolts and other fasteners and remove any sharp edges with				
	a metal file as needed?				
	Placed the equipment on level ground, not less than six feet (1.8 meters) from any structure or obstruction such as a fence, garage,				
	house, overhanging branches, laundry lines, or electrical wires?				
	Made sure home playground equipment is not installed over concrete, asphalt, packed earth or any other hard surface? (A fall onto				
	a hard surface can result in serious injury to the equipment user.)				
	Verified that suspended climbing ropes, chain, or cable are secured at both ends?				
	Consulted in assembly instructions of your particular model for minimum use zones?				
	Followed all anchoring and shock absorbing surfacing requirements on the back of this sheet as they apply?				
	Made sure not to allow children to use equipment until it is properly installed?				
	ting Safety – Have You:				
	Determined that on-site adult supervision is provided for children of all ages?				
	Warned children the following before allowing them to use the equipment?				
_	□ Not to walk close to, in front of, behind or between moving items.				
	☐ Not to twist swing or any other accessory chains or ropes or loop them over the top support bar since this will reduce the				
	strength of chain or rope.				
	□ Not to swing empty seats or other accessories.				
	Be sure to sit in the center of the swing seat and other accessories with full weight on the seat.				
	Not to attach items to the playground equipment that are not specifically designed for use with the equipment such as but not				
	limited to, jump ropes, clotheslines, pet leashes, cables and chain. They may cause a strangulation hazard.				
	□ Not to use equipment in a manner other than intended.				
	□ Not to get off equipment while it is in motion.				
	□ Not to climb on the equipment when it is wet.				
	Determined that only one child per planned occupant seat should be allowed on this set at one time.				
	Determined children must be dressed appropriately for play. Avoid clothing with draw strings and loose fitting clothes which				
_	could become entangled or snagged on equipment.				
	Determined that suspended climbing ropes, chain, or cable cannot be looped back upon itself.				
	Read and understood the following warning regarding the use of two and four passenger lawn swings?				
_	Warning: Lawn Swings are designed for use by children over two years of age. Use by children under the age of two can result				
	in entrapment between the seats and back areas. Never place children in a rearward facing position or with legs between the				
	seat and backrest because the child's body may pass through the opening causing entrapment of the child's head.				
Safety	Maintenance – Have You Determined to:				
	Check all nuts and bolts twice monthly during the usage season for tightness and tighten as required? (It is				
_	particularly important that this procedure be followed at the beginning of each season.)				
	To prevent the deterioration of materials, remove plastic swing seats and other plastic accessories and take indoors? (Do not				
	use when the temperature drops below 0° F.)				
	Oil all metallic moving parts monthly during usage period?				
	Check all hardware and equipment for sharp edges twice monthly during usage season? (Replace when				
	necessary. It is especially important to do this at the beginning of each new season.)				
	Check swing seats, chains, ropes and cables monthly during usage season for evidence of deterioration? Severe rusting or excessive				
_	wear, especially near the top swing hanger or at the seat connection are evidence of chain deterioration. Cracks in the protective plastic				
	sleeve or seat itself are also signs of deterioration. If any of these conditions exist, call 1-800-888-1232 to order replacement accessories.				
	Sand rusted metal parts and repaint using non-lead based paint				

 
Disposal Instructions

When the equipment is taken out of service, it must be disassembled and disposed of in such a way that no unreasonable hazards will exist at the time the set is discarded.

ASSEMBLY INSTRUCTIONS

TOOLS REQUIRED










ELECTRIC DRILL

CIRCULAR SAW

TAPE MEASURE

 1/2" SOCKET & WRENCH









HAMMER

PHILLIPS BIT

SQUARE

SAFETY GLASSES & DUST MASK


ADDITIONAL LUMBER PURCHASED SEPARATELY

Qty.	Description
3	2" x 4" x 8'
1	2" x 4" x 10'
1	4" x 4" x 8'


HARDWARE INCLUDED

(2) 1-1/4" Wood Screw
(74) loc nuts
(14) 1-1/2" lag bolts
(4) 2-1/2" lag bolts
(18) flat washers
(70) 3/4" bolts


SLIDE COMPONENTS

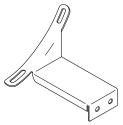

 (1) Slide Bracket



 
(1) Entrance Section marked no. 1




(1) Support Bracket



(1) Entrance Section marked no.2

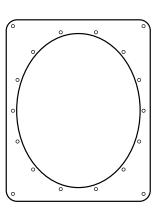


 (1) Entrance Panel




(1) 90° Sections w/flange, marked no. 4 Top

(2) 90° Sections w/o flange, marked no. 3 Bottom

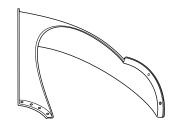

(1) Exit Section marked no. 5

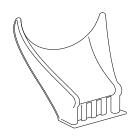

(1) Slide Base marked no. 6


LUMBER CUT LIST

(3)-2" x 4" x 96"


(1)-2" x 4" x 120"


(1)-4" x 4" x 96"

Note: To match the wood appearance on your playset, make certain to use Behr Deck Plus Semi Transparent Stain Redwood DP-330 Tint Base 377(3077).

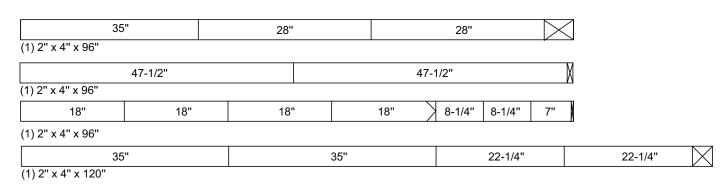

			66"	
7.4	\ 41I	411		-

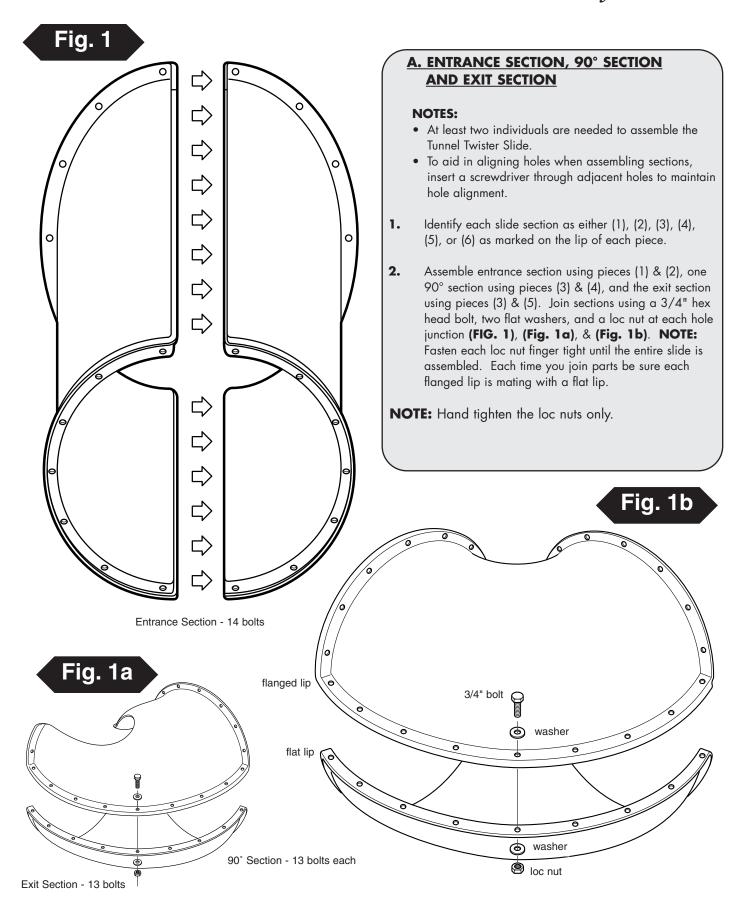

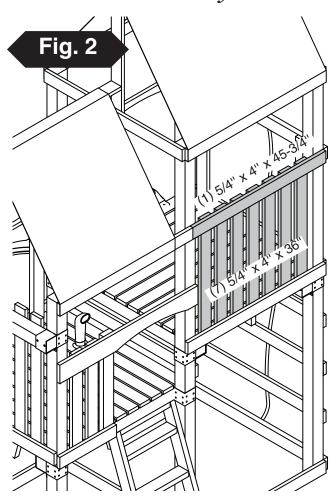

NOTE:

This plan illustrates the Tunnel Twister
Slide being attached to the Palisade
Playset. However, this same procedure is
to be used for attachment to the
Summerville Playset


2-1/2" screw


B. Slide Barrier Construction


1. Carefully remove (1) 5/4" x 4" Barrier Support Board and (7) 5/4" x 4" Barrier Boards from the barrier where you would like to place your slide, making certain you will have a clear 72" Safety Zone for your slide. (Fig. 2).

Retain this lumber as you may need it in a later step.

2. Install (2) 2" x 4" Barrier Support Boards as shown in **(Fig. 2a)**, making certain the opening between them is 30".

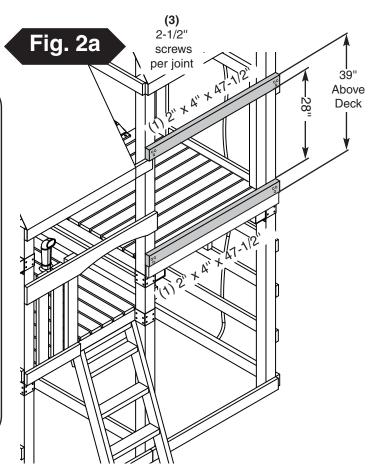

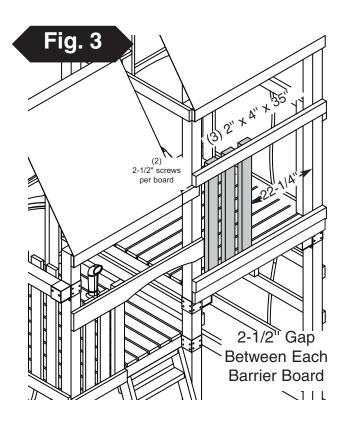


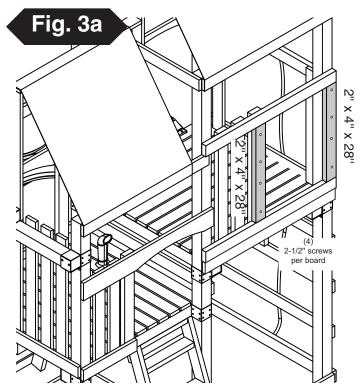


2-1/2" screw

C. Slide Barrier Cont.

- 1. Install (3) 2" x 4" Barrier Boards as shown in (Fig. 3). Space Barrier boards as shown and make certain your opening is 22-1/4" wide.
- **2.** Install (2) 2" x 4" x 28" Boards as shown in **(Fig. 3a)**.
- **3.** Install (2) 2" x 4" x 22-1/4" Slide Support Boards on the inside of your barrier as shown in **(Fig. 3b)**.

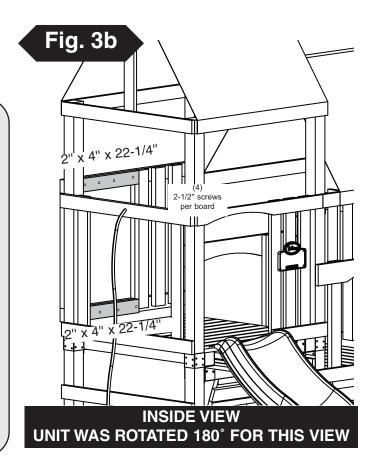


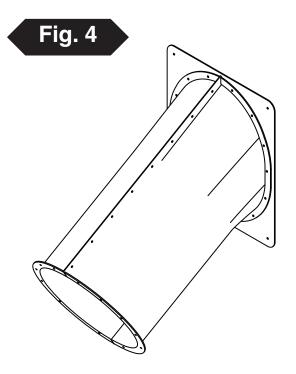



D. Slide Support and Entry


1. Align the mounting panel to the previously assembled entrance section (Fig. 4). Attach the mounting panel to the entrance section at the hole locations indicated in (Fig. 4a) using one 1" bolt, two washers and one loc nut per hole as indicated in (Fig. 4b).


NOTE: Hand tighten the loc nuts only.

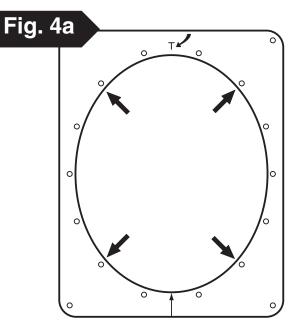


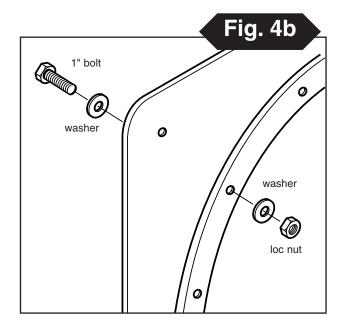

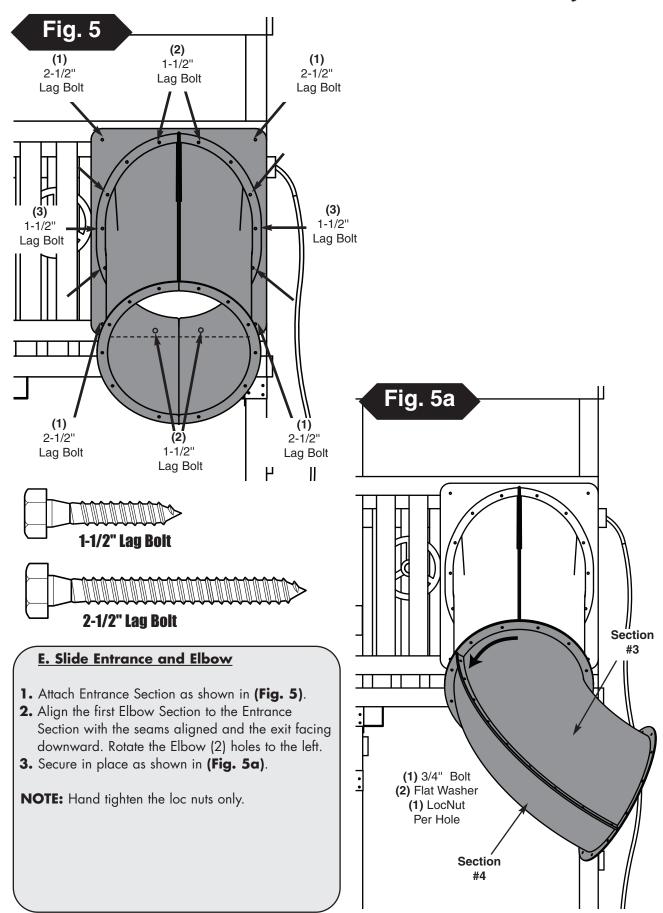

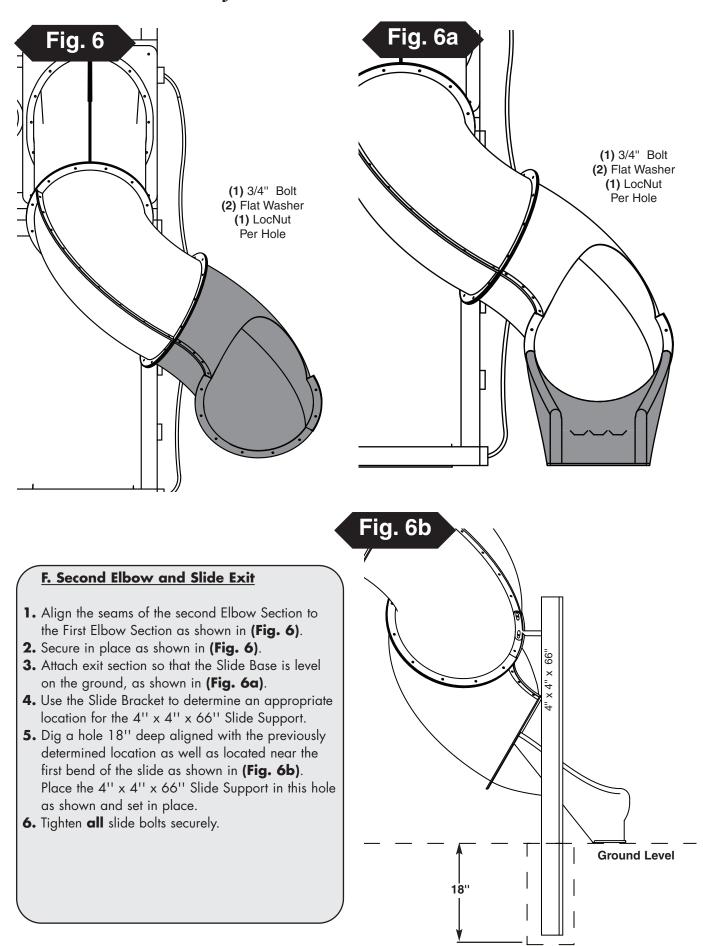


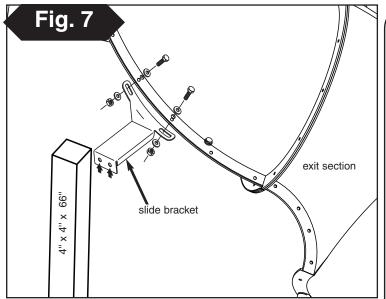


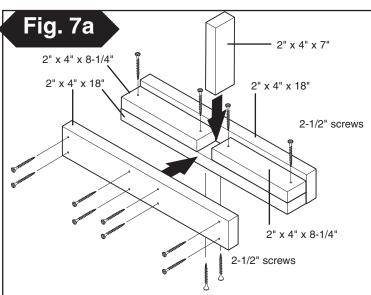




- Position the slide bracket as shown in (FIG. 7).
 Remove appropriate bolts from the slide (the fourth and fifth bolts as indicated), Attach bracket to the underside of the seam using the previously removed hardware (FIG. 7).
- 2. Using holes in the bracket (indicated by arrows in (FIG. 7)) as a guide, mark and drill 1/8" pilot holes (1" deep). NOTE: You may need to temporarily remove the slide bracket to drill the pilot holes.
- **3.** Re-attach bracket (if necessary) and secure it to the $4'' \times 4''$ Slide Support using two 1-1/2" lag bolts .
- 4. Assemble the support base as shown in (FIG. 7a).
- Attach the support bracket to the support base using two 1-1/2" lag bolts (FIG. 7c).
 NOTE: Pre-drill 1/8" pilot holes.
- **6.** Place the support beneath the slide base and determine its final position. **NOTE:** Slide support should fit tightly beneath the slide to assure proper support. Remove corresponding nut and bolt, attach support to the slide as indicated in **(FIG. 7b)**. Re-attach hardware.
- 7. Level grade at the bottom of the slide.

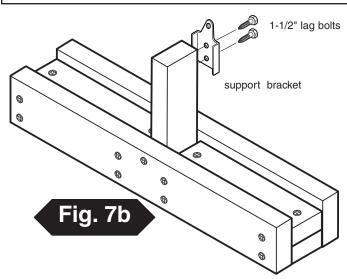

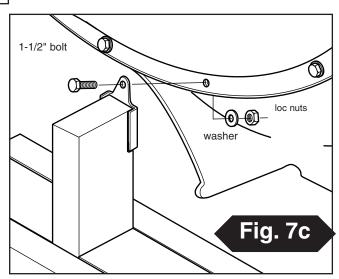

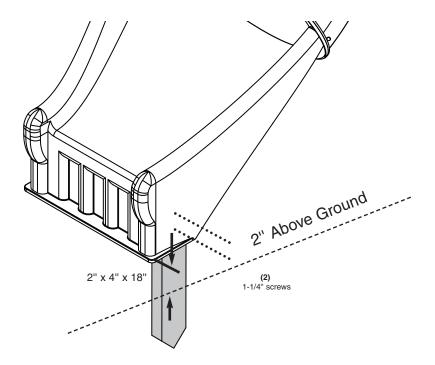

H. Slide Installation.

- 1. Position slide to determine proper location for stake.
- 2. Drive wood stake into ground leaving 2" exposed.
- 3. Secure the slide bottom to the stake using (2) 1-1/4" deck screws. (Fig. 8).

Questions???... Call our Customer Service Department at 1-800-888-1232